

# Banana-Pi-R1: Stop green LED from blinking

```
root@pi:~# grep led /etc/rc.local
# stop green led from blinking
echo none > /sys/class/leds/green\:ph24\:led1/trigger
```

[kb](#), [linux](#), [banana-pi](#)

From:

<http://fortytwo.adurias.org/> - Fortytwo - Answer to the Ultimate Question of Life, the Universe, and Everything



Permanent link:

<http://fortytwo.adurias.org/banana-pi-r1-stop-green-led-from-blinking?rev=1503135647>

Last update: **2017/08/19 11:40**