

# Banana-PI-R1: Stop green LED from blinking

```
root@pi:~# grep led /etc/rc.local
# stop green led from blinking
echo none > /sys/class/leds/green\:ph24\:led1/trigger
```

[kb](#), [linux](#), [banana-pi](#)

From:

<http://fortytwo.adurias.org/> - **Fortytwo - Answer to the Ultimate Question of Life, the Universe, and Everything**

Permanent link:

<http://fortytwo.adurias.org/banana-pi-r1-stop-green-led-from-blinking?rev=1503248039>

Last update: **2017/08/20 18:53**

